

Touch one-door Access Controller

User manual V1.3

1、 Technical parameters:

NO	ITEM	Parameter
1	Operating voltage	DC 12V±10%
2	Operating current	< 100mA
3	Dimensions	120mm×78mm×22mm
4	Weight	130g
5	Ambient temperature	-10℃—70℃
6	Relative humidity	20%—80%
7	Storage	1000 users
8	Card type (alternative)	EM(ID) card(IC card for option)
9	Card reading distance	1—15CM

2、 Factory default settings:

Programming Password	123456
Open Mode	Card or Access PIN
Output signal time	5secs
Backlight	Auto
Security function	Off
WG26Port	Input

3、 LED and buzzer indicates:

Two-color LED: red and green:

NO	Led State	Access control status
1	light red once every 1 sec (Slow flash)	Holding state
2	light red, N.O.	Programming state
3	light green within Open time	Unlocking state
4	light green once every 0.3sec (Fast flash)	Pending further action

Built-in buzzer:

Description	Status
1 short buzz	Valid input
3 short buzz	Invalid input
1 long buzz	Program success
Continuous long buzz	Restoring factory programming passwords


4、 Installing wiring diagram:

JP1

PIN	Color	Function
+12V	Red	Power+
GND	Black	Power-
PUSH	BLUE	Low level output
OPEN	Yellow	Door Release
BELL	Grey	BELL
BELL	White	BELL

JP2

PIN	Color	Function
+12V	Red	Power+
GND	Black	Power-
DATA0	GREEN	WG DATA0
DATA1	White	WG DATA1
NC	Brown	Relay NC output
COM	BLUE	Relay Com output
NO	PURPLE	Relay NO output

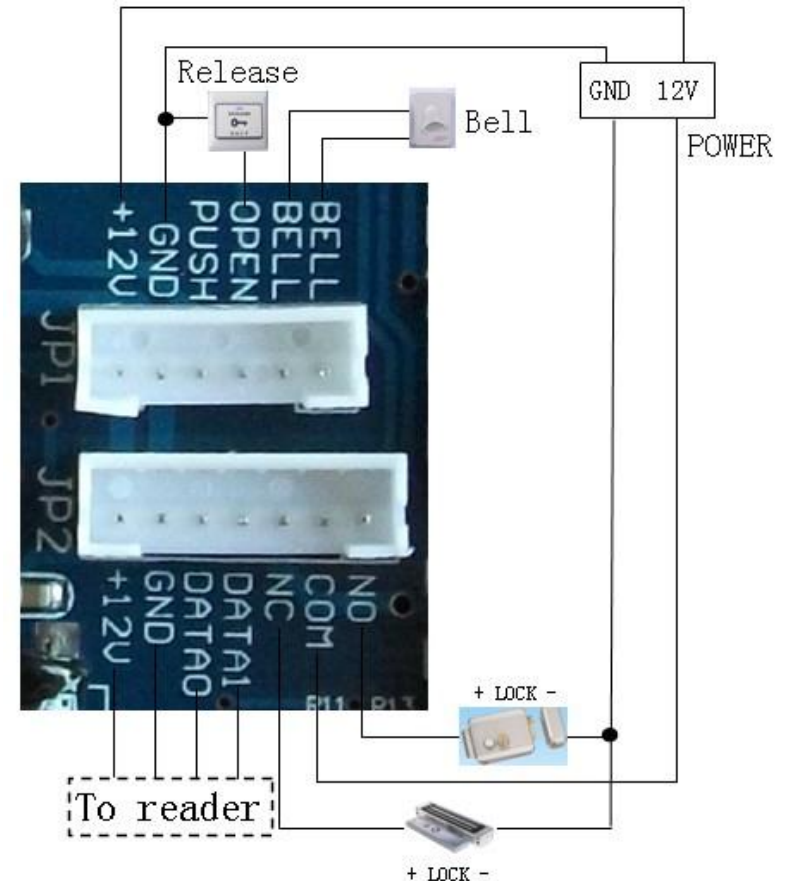

5. Access control function setting:

5.1 Enter and exit programming mode

Step1: In holding state, press **#123456#**, access controller enter system programming state with LED lighting red and buzzer giving a short voice.

Step2: In Programming state input programming commands (See 5.2).

Step3: In programming state, press **ESC** to exit.

Note: If there is no operation in 2mins system will exit programming state.

5.2. Function setting

"0" key, modify the programming password:

Press **0** **New password** **#** **New password again** **#**

Note: programming password is 3~6 digits (Default: 123456)

"1" key, Log on card users

Press **1** **User No.** **read card** **#**

User No. is 4-digit: 0001~9999, and use to delete users.

Bellow we refer to user No. of "2" and "3" key are same.

Note: Read card continuously for logging on users continuously and exit by pressing **#**.

"2" key, Log on password users

Press **2** **User No.** **Access PIN** **#**

Note: Access PIN is 3~6 digits. An access PIN also accounts for one user.

"3" key, Log on card + password users

Press **3** **User No.** **read card** **Access PIN** **#**

When you add a user, each time you add a user successfully the buzzer gives a long voice . If you added failed the buzzer gives 3 short voices . Failure may be due to:

(1) User No. duplicates; (2) Card No. already exists; (3) store is full.

"4" key, delete the users

Press **4** **0** **0000** **#** Delete all users

Press **4** **1** **read card** **#** Delete card user via reading card

Press **4** **2** **User No.** **#** Delete card user via User No.

Press **4** **3** **input Card No.** **#** Delete card user via input Card No.

Note: Enter the left 10 digits of the card No.

"5" key, modify Unlock Signal Output Time

Press **5** **XX** **#**

Note: "XX" is 2-digit: 00~99, Unit: second, "00" indicates moment unlock (0.2 seconds).

"6" key, set Open mode

Press **6** **10** **#** Read valid card to open

Press **6** **11** **#** Read valid card and enter Access PIN to open

Press **6** **12** **#** Read valid card or enter Access PIN to open

Press **6** **13** **#** As WG26 reader to use

"7" key, set Security mode

Press **7** **00** **#** Turn off security function

Press **7** **01** **#** Turn on security function(System would be locked for 5 Minutes when continue to (1) read illegal card 10 times or (2)read the valid card but enter wrong Access PIN 4 times or (3)enter wrong Access PIN 10 times).

Press **7** **02** **#** Turn off Anti-dismantle alarm function

Press **7** **03** **#** Turn on Anti-dismantle alarm function

"8" key, set Anti-dismantle, set backlight mode and restore factory settings

Press **8** **01** **#** Backlight Normally Open

Press **8** **02** **#** Backlight Normally Close

Press **8** **03** **#** Backlight Automate: Backlight turn off in15 seconds if there are no operations.

Press **8** **99** **#** Restore Factory settings.

5.3 Programming Password initialization method

Step1. Turn off power and connect bin 2&3 of S1.

Step2. Turn on power and buzzer gives long voice Continuously.

Step3. Turn off power, disconnect bin2&3 and connect bin 1&2 of S1.

Step4. Turn on power again, the buzzer gives a long voice, Access controller initialization is completed. After initializing **Programming Password** default settings (**123456**), user data will not be lost.

6. User Open operation

6.1 Read card to open (Open mode: Card, Card or Access PIN)

In holding state read valid card, buzzer gives a short voice, LED lights green, Unlock signal outputs and door opens successfully.

6.2 Enter Access PIN to open (Open mode: Card or Access PIN)

In holding state enter **Access PIN** **#**, buzzer gives a short voice, LED lights green, Unlock signal outputs and door opens successfully.

6.3 Read card and enter Access PIN to open (Open mode: Card + Access PIN)

In holding state read card, buzzer gives a short voice, LED lights green with fast flash, then enter **Access PIN** **#** within 5 seconds, and buzzer gives a short voice, LED lights green, Unlock signal outputs and door opens successfully.

Note: If buzzer gives 3 short voices it indicates that the card or password is illegal and open failed.

6.4 Change Access PIN (Open mode: card+ Access PIN):

After reading card and entering PIN to open the door, within 5 seconds, long press" #" until the LED lights green with fast flash. and then enter **new Access PIN** **#** **repeat new Access PIN** **#**. buzzer gives a long voice, Access PIN changed successfully.